

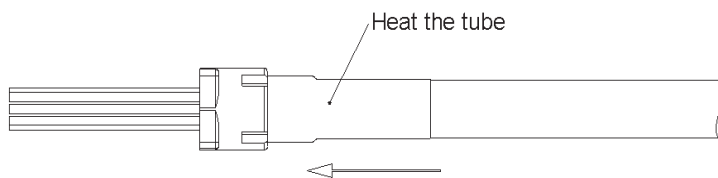
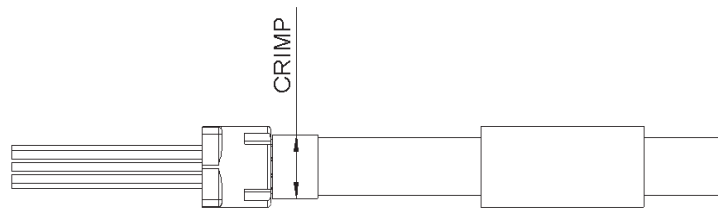


Assembly instruction DVM / DVMA Series

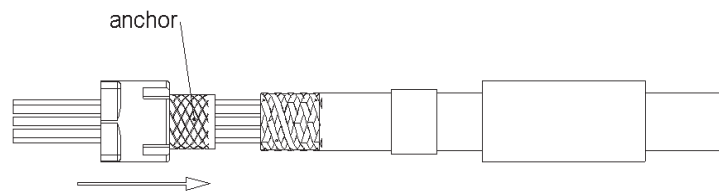

Mount connector and cable into the backshell.

Assemble the other half
screwing force: 100-120 Ncm.

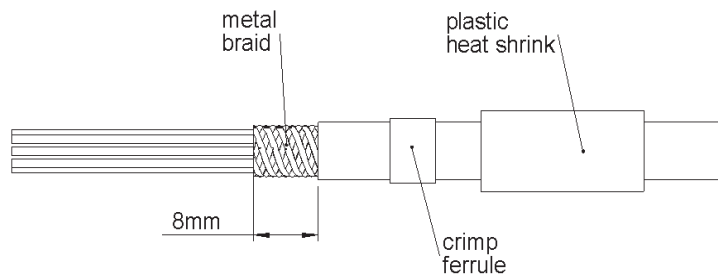